Rev A\ 2012/11/13\ SF-491DSCA\ AK

GFAP Rt-Cy5 SmartFlareTM RNA Detection Probe

Cat. # SF-491

FOR RESEARCH USE ONLY

pack size: 50µL (250 rxns)

Store at 2-8°C, after reconstitution store at 23-27°C DO NOT FREEZE



Product Data Sheet

page 1

Validated Accession #NM 017009.2

NOT FOR USE IN DIAGNOSTIC PROCEDURES

NOT FOR HUMAN OR ANIMAL CONSUMPTION

Species Rt

Gene Aliases

Confirmation of GFAP SmartFlare Performance:

GFAP SmartFlare has been tested in a buffer system to detect the release of the fluorophore in the presence of a complementary base pair sequence for each lot to confirm target specificity.

GFAP SmartFlare has also been tested in a cell model system and demonstrated increased fluorescence in cells expressing the target compared to a scrambled negative control SmartFlare (Figure 1). For additional accession numbers predicted to react with this SmartFlare Probe, please visit http://www.millipore.com/catalogue/item/SF-491

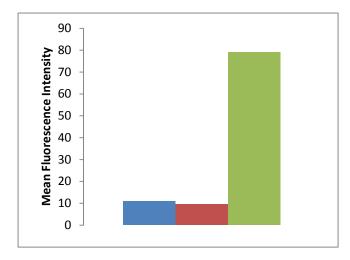


Figure 1: GFAP Mean Fluorescence Intensity (green) measured by flow cytometry in living rat astrocytes demonstrated a significant increase over unflared cells (blue) as well as scramble control (red). Data shown in graph is representative.

Storage and Handing:

Material has been 0.22µm filtered. Stable for 5 years at 2-8℃ degrees in lyophilized format ONLY. Room temperature is required for reconstituted product.

Warning-after reconstitution product is sensitive to cold and hot temperatures, a stable room temperature of 23-27℃ is required.

Handling Recommendations:

Reconstitute with sterile nuclease free water in a drop wise fashion tap tube repeatedly to fully dissolve lyophilized material. Vortex for 5-10 sec.

Upon reconstitution, store at room temperature for up to 1 year protected from light. Product must be handled with gloves as product can be absorbed through the skin.

Recommended Cell Testing Protocol:

(example: 30,000 cells in a 200µL media volume within each well of a 96 well plate)

- Reconstitute reagent in 50µL of sterile nuclease free water.
- Create a working solution based on your experiment by diluting 1:20 in sterile PBS.
- Add 4µL directly to cells (at approx 80% confluency).
- Allow to incubate overnight for 16 hrs.
- Detect using fluorescence detection platform of choice.

